Canopy Setup

1.

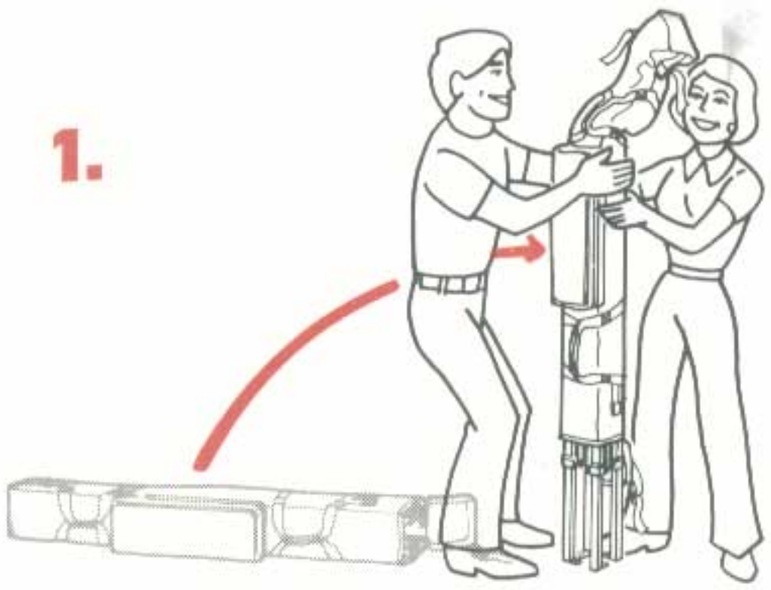

2.

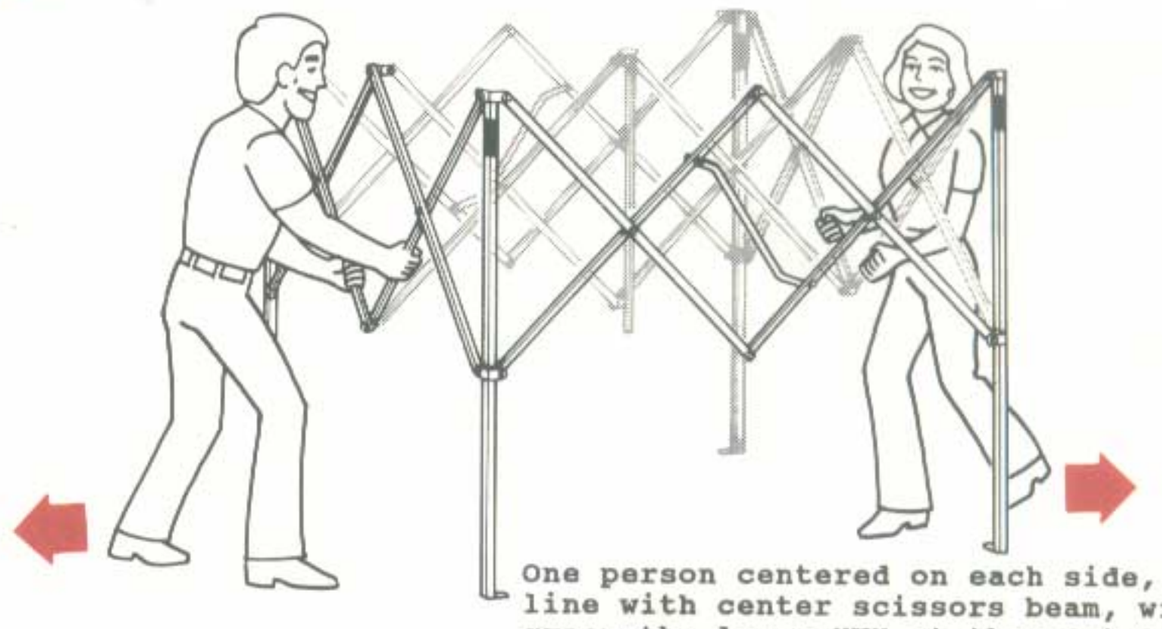

One person centered on each side, in line with center scissors beam, will grasp the lower "V" at the center. Both will lift and pull out, stepping away from each other.

3.

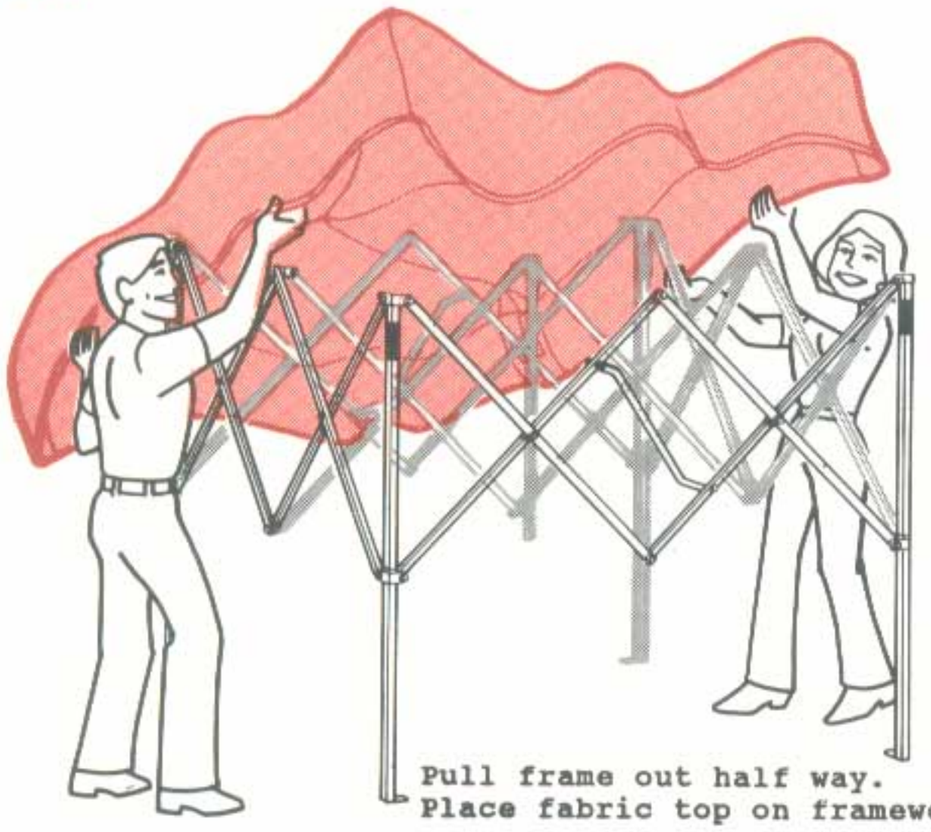

Pull frame out half way.
Place fabric top on framework.

4.

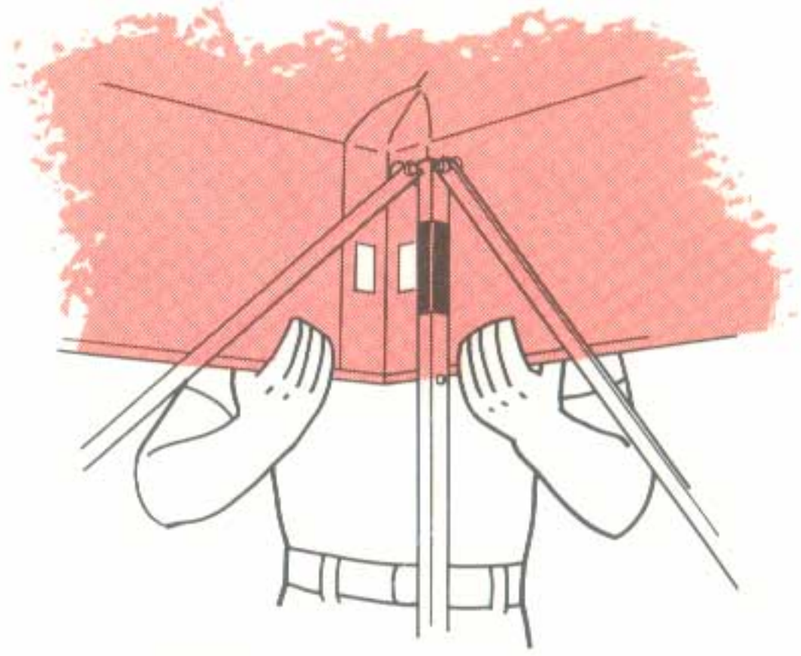

Attach to each velcro corner.

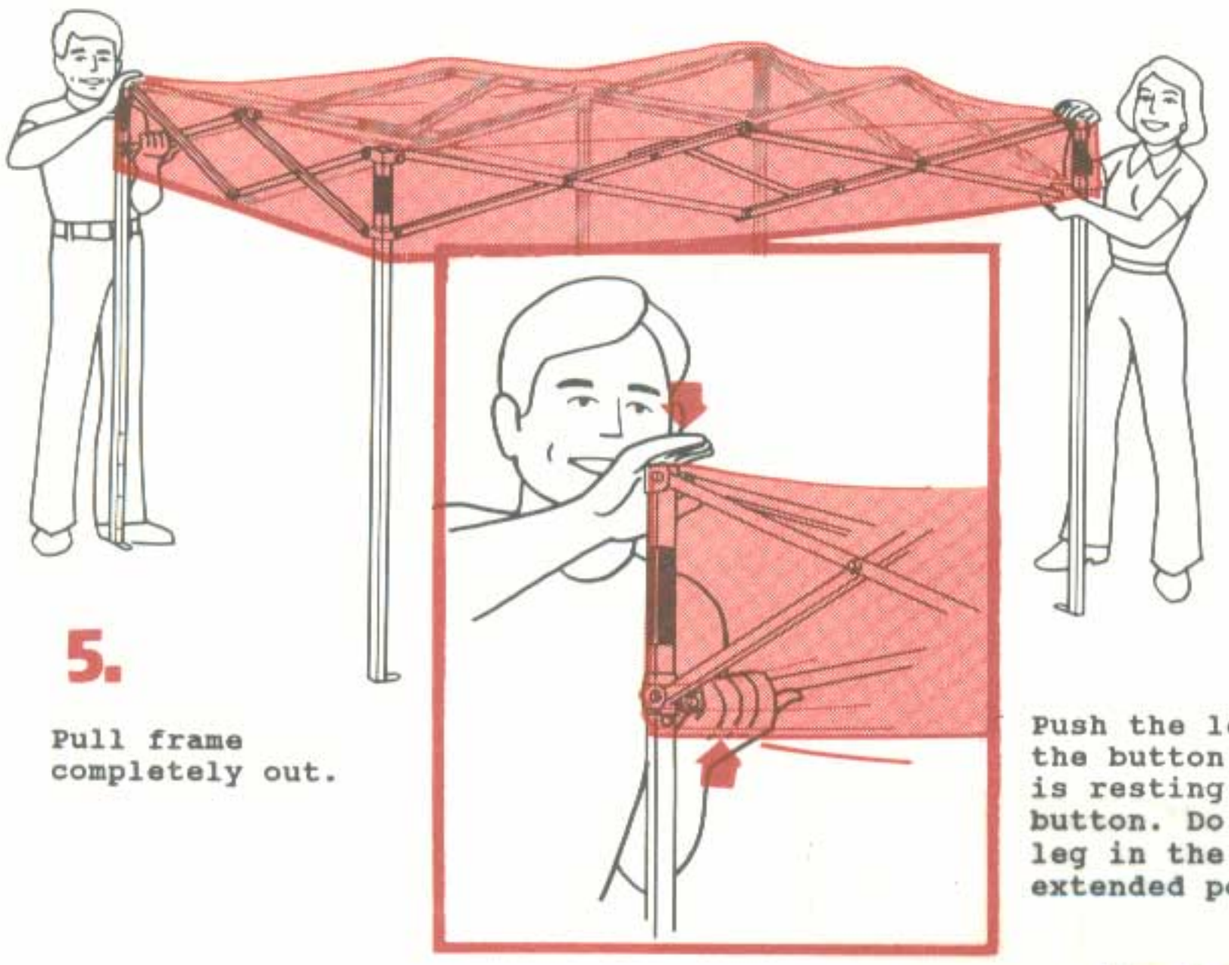

5.

Pull frame completely out.

Push the leg socket over the button, so that it is resting top of the button. Do this to each leg in the up, or extended position.

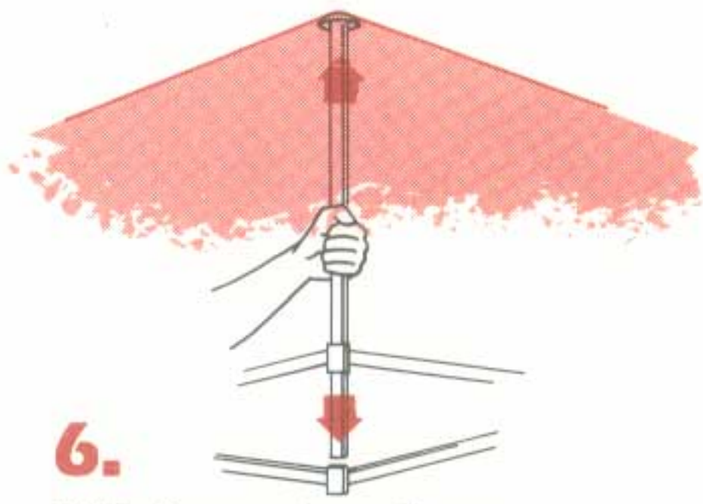

6.

Lift the center pole up and set the lower end into the support socket.

Caution:

Avoid use during heavy downpours and strong winds. Water may collect on canopy tops in heavy rain.

7.

Lift each leg and slide lower leg extension out until the latching button snaps into the first adjustment hole. The KD Kanopy will be set at the lowest upright position.

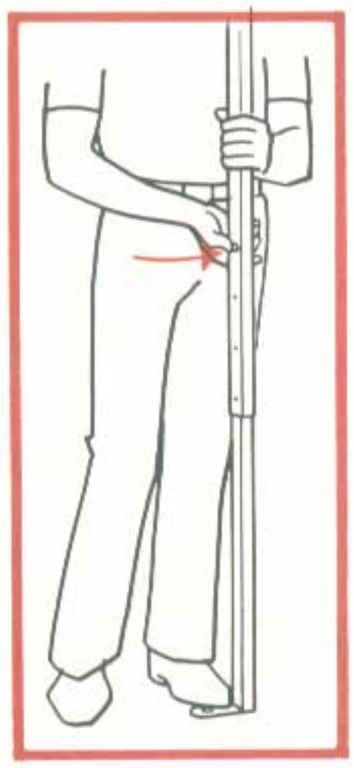

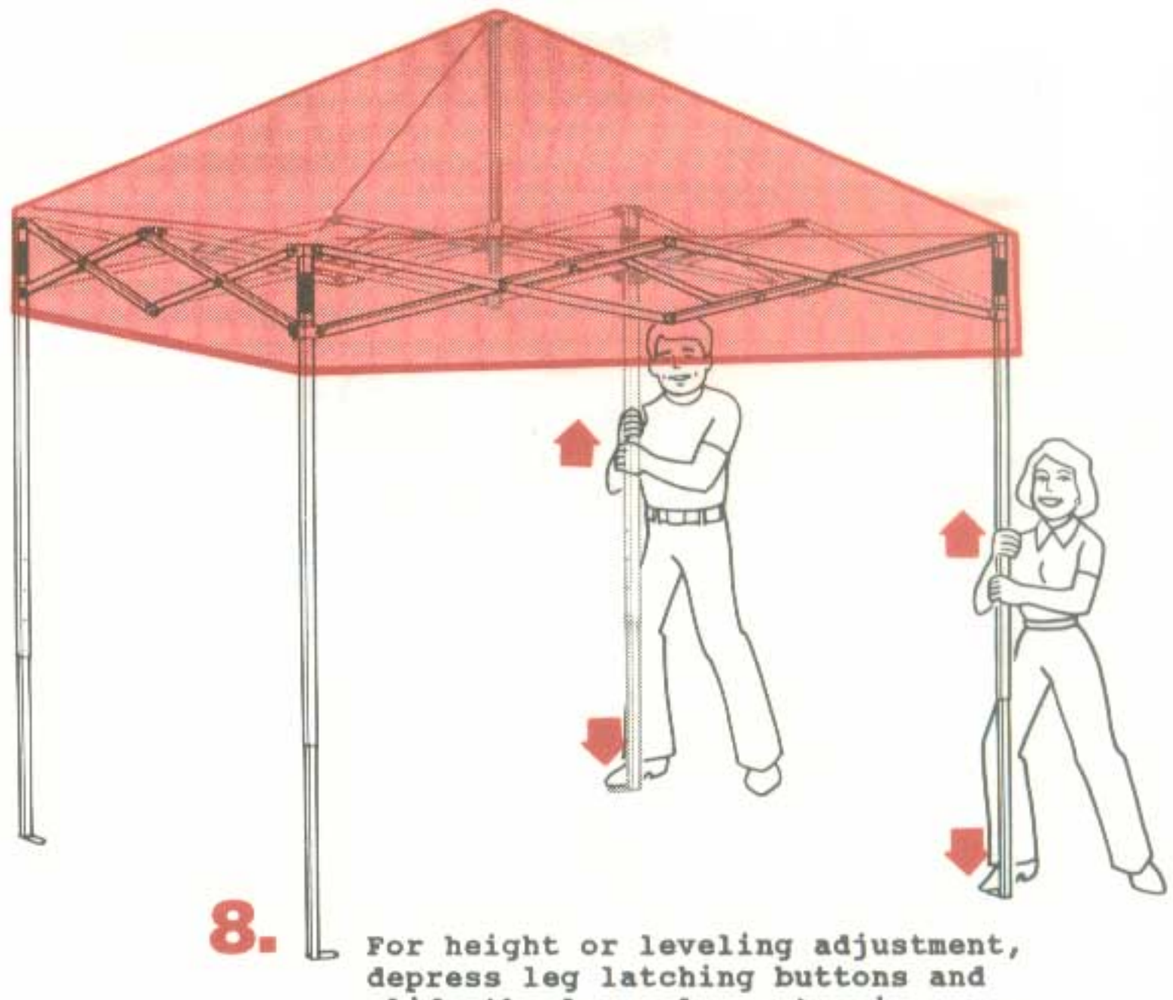

8.

For height or leveling adjustment, depress leg latching buttons and slide the lower leg extensions, as required, to latch at any of the four (4), adjustment holes.

TAKE-DOWN:

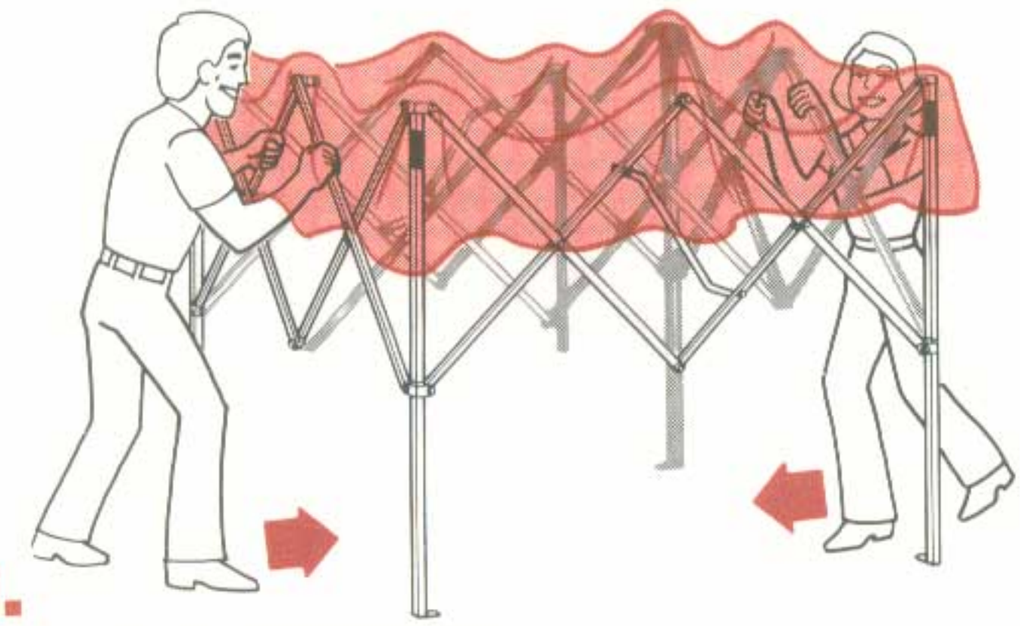

1.

Fully retract all lower leg extensions.

Depress latching buttons at sliding leg sockets and move sockets below the latching button.

Push frame together half way. Two persons centered on opposite sides, in line with center scissors beam, will gasp the <u>upper</u> inverted "V" at the center. Both will lift and push in, walking toward each other.

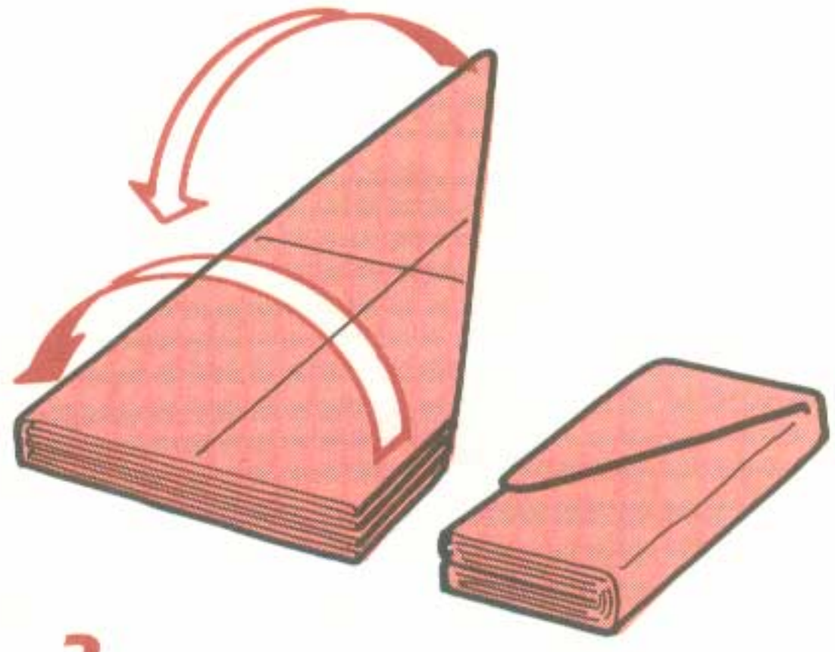

2.

Detach fabric top from each corner and remove from framework.

Push frame nearly closed by the same action as in Step 3, then for final closure, hug the framework.